

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information - **please leave instructions for the consumer.**
- Observe all local plumbing and building codes.
- Carefully inspect the new urinal for damage.
- Site preparation may require additional tools and hardware.
- Fixture dimensions are nominal and conform to tolerances established by ASME Standards (A112.19.2-2018).
- The product complies with GB 6952-2015, GB 28377-2019.



CAUTION: Risk of personal injury or product damage. Handle with care. Vitreous china can break or chip if the product is handled carelessly.

安装之前

- 请通读本说明书，以便了解所需工具、材料及安装程序。请遵照相关章节进行安装，以避免由于安装不当而导致不必要的损失。除了有关正确的安装方法之外，还务请详阅所有操作及安全说明。
- 本说明书所含一切资料，均以印刷时所有的最新产品为准，科勒中国保留随时更改产品特性、包装或供应情况的权利，恕不另行通知。
- 本说明书也包含了有关护理、清洁及保养等重要资料 - 请交予用户保存。
- 遵守当地所有给排水及建筑规定。
- 仔细检查新的小便器是否损坏。
- 准备场地可能要求附加工具和硬件。
- 部件尺寸为标定值，误差符合美国ASME标准(A112.19.2-2018)。
- 本产品符合GB 6952-2015、GB 28377-2019。



警告：可能有人身伤害或产品损坏的危险。小心处理，若有所马虎，陶瓷件可能碎裂。

RECOMMENDED TOOLS AND MATERIALS (NOT SUPPLIED)

- Open end/adjustable wrenches
- Tape measure
- Basin wrench
- Pipe wrench
- Square
- Level
- Pliers
- Socket wrench with sockets
- Screw driver
- Seal tape
- Connection wire
- Wire cutter
- Insulation tape
- Bushing
- Drill
- Sealant

所需工具及材料(不随货供应)

- 开口/活动扳钳
- 卷尺
- 梅花扳钳
- 管扳手
- 直角尺
- 水平尺
- 老虎钳
- 管钳子
- 十字螺丝刀
- 生料带
- 连接线
- 剥线器
- 绝缘胶布
- 电工套管
- 冲击钻
- 密封胶

No.2 KOHLER ROAD, SANSHUI CENTRAL INDUSTRIAL PARK, LEPING TOWN, SANSHUI DIST., FOSHAN, GUANGDONG, PRC POST CODE: 528137
广东省佛山市三水区乐平镇三水中心工业园区科勒大道2号 邮编: 528137

8# MENGSHAN RD, ECONOMIC DEVELOPMENT ZONE OF HUANTAI, ZIBO, SHANDONG, CHINA POST CODE: 256410
山东省淄博市桓台经济开发区蒙山路8号 邮编: 256410

NO.1 KOHLER STREET, ECONOMIC DEVELOPMENT ZONE OF FAKU COUNTY, SHENYANG LIAONING PROVINCE, PRC POST CODE: 110400
辽宁省沈阳市法库经济开发区科勒大街1号 邮编: 110400

SPECIFICATIONS

规格

Power	2 "AA" size alkaline batteries(DC)	220V AC 50/60Hz (AC)
Liter per flushing	Water pressure at 0.18~0.55 MPa: Less than 2.5L(K-5888T-2(2.5L)) Less than 1L (K-5888T-2W(1L)) Less than 0.5L (K-5888T-2Y(0.5L))	
Temperature	Environmental temperature: 1 to 55°C	
Starting pressure	0.07Mpa (Dynamic pressure)~0.86MPa (Static pressure)	
Testing time	About 2 to 5 seconds	
Detecting method	Detecting the urine and human movement	

电 源	2节5号碱性电池(AA × 2)(直流型)	220V AC 50/60Hz (交流型)
冲洗水量	水压为0.18~0.55MPa.时, K-5888T-2(2.5L)不大于2.5L K-5888T-2W(1L)不大于1L K-5888T-2Y(0.5L)不大于0.5L	
使用温度	环境温度:1~55°C	
启动压力	0.07Mpa(动压)~0.86MPa(静压)	
检测时间	约2至5秒	
检测方式	检测尿液及人体运动	

ROUGHING-IN



尺寸图

Reference Value
参考值

Unit:mm
单位: 毫米

* Recommended dimensions for installation only, please adjust according to actual situation.

* 仅为建议安装尺寸，客户可根据实际情况调整。

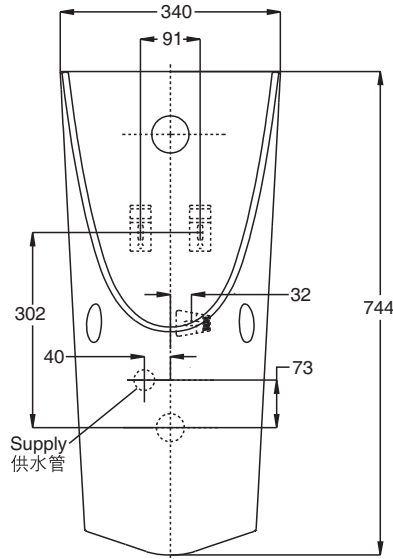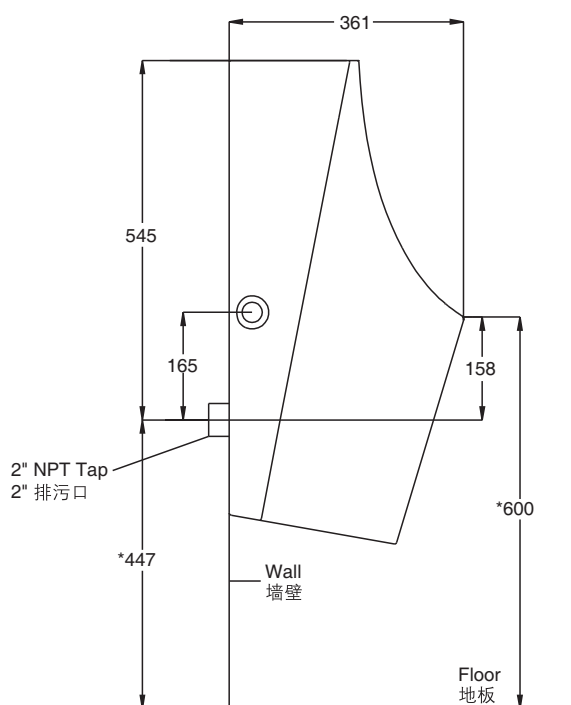

Kohler reserves the right to change marked dimensions without prior notice.
科勒公司保留随时变更图中标示尺寸的权利，无需另行通知。

Fig.1
图1

- Roughing-in dimensions are identical if using an optional 3"outlet spud.
- 若使用选用的3"出水口、尺寸图仍然相同。



Notice: To ensure an effective flush performance, strongly recommended inner diameter of water supply (including water meter, valve, etc.) is no less than 25mm, and supplied water pressure (sensor inlet dynamic pressure) is 0.18MPa ~0.55MPa.



注意: 为保证有效冲洗, 推荐供水管路(包括水表、阀等)内径不小于25mm, 推荐供水水压(冲洗器进水口流动水压): 0.18MPa ~0.55MPa。

PREPARE THE SITE

NOTE: If a pre-existing waste pipe will be used and will result in an acceptable rim height (refer to the rough-in dimensions), follow the retrofit installation instructions.

For Retrofit Installations

- Turn the water supply line off, remove the existing urinal, then cap off the water supply line inside the wall.

For New Installations

- Install waste pipe as necessary to conform to the roughing-in dimensions.
- Install adequate support framing for the hangers as needed.

准备场地

注意: 如果现存的排水管可以使用, 边缘高度符合要求(参考尺寸图), 则参照更换安装说明安装。

对于更换安装

- 关闭水源, 移除现有的小便器, 然后封住墙内的供水管线。

对于全新安装

- 如有必要, 根据尺寸图安装排水管。
- 如有需要, 安装有足够承载能力的支撑架。

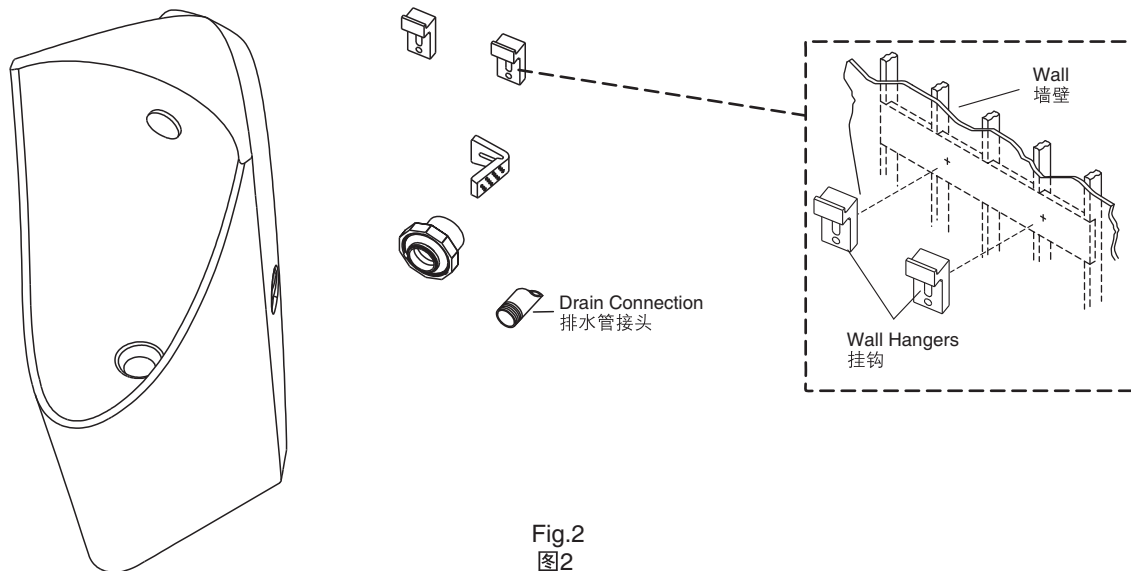


Fig.2
图2

INSTALLATION

安装步骤

A. Install hangers, L shape block and waste pipe connector

Drill holes according to template. Install hangers, L shape block and waste pipe connector. (Gasket of waste pipe connector shall be soaked into water for 2 seconds to lubricate.)

A. 安装挂钩、L形固定块和排污管接头

按安装模板打孔, 并安装挂钩、L形固定块和排污管接头。(排污管接头的密封圈要泡到水两秒钟, 以便润滑)

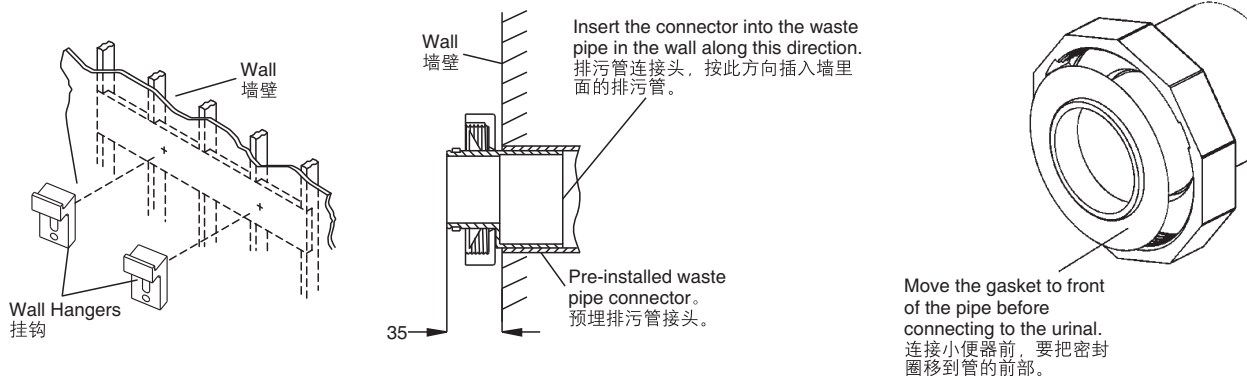


Fig.3
图3

B. Install urinal

1. Test flushing. Remove regulator (supplied only for 2.5L urinal) when water pressure is too low.

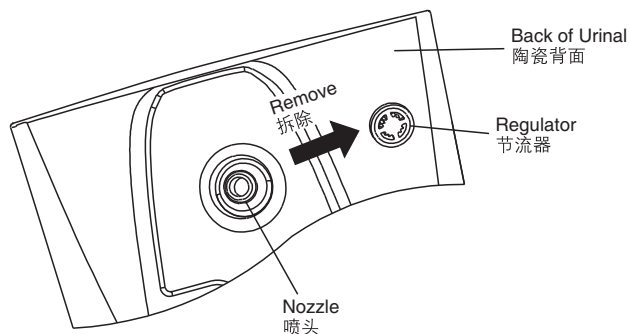


Fig.4
图4

2. Connect inlet pipe and fill valve.
3. Hang the urinal onto the hangers.
4. Loosen the nut and drag the clamp towards center. Take out the fixture, valve and battery box assembly at the bottom. Load batteries.
5. Pull the bottom of the urinal outwards to make space. Align the big nut with the waste pipe and then tighten.
6. Push the urinal against wall and tighten it with screws.
7. Fix the connectors and then put the fixture, valve and battery box assembly back into the urinal.
8. Apply silicone sealant between urinal and wall.

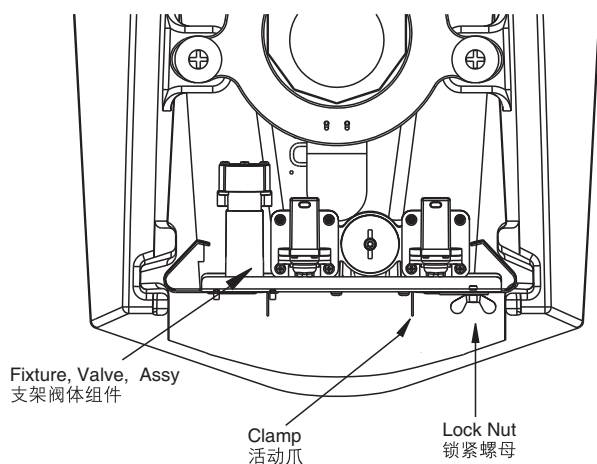


Fig.5
图5

B. 安装小便器

1. 测试冲水，水压过小时拆除节流器（已提供，仅限2.5L版本）。

2. 连接进水管和进水阀。
3. 把小便器挂上挂钩。
4. 松开锁紧螺母，把活动爪往中心拖动，然后把底部的支架阀体电池盒组件拿出来。装上电池。
5. 把小便器的陶瓷底部往外拉动一定距离，腾出空间，用手把大锁紧螺母对准排污管，并上紧。
6. 把小便器推紧贴墙，然后把螺钉穿过螺钉固定孔，上紧小便器。
7. 接好电池盒和感应器的连接头，然后把支架阀体电池盒组件装回小便器里面。
8. 在小便器和墙之间打上玻璃胶。

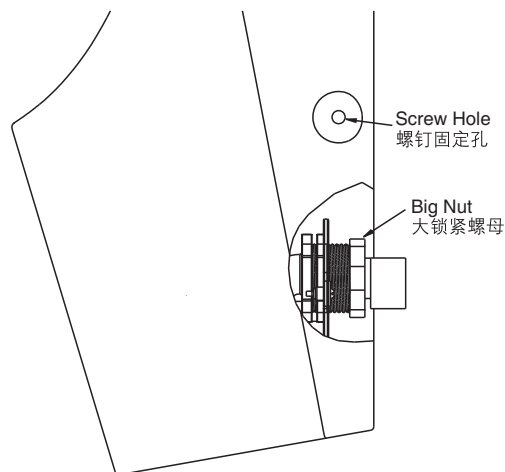


Fig.6
图6

C. Adjust the hanger

C. 调整挂钩

1. As shown in the picture below, firmly press the hanger with the bolt through the waist-shaped hole.

1. 如下图所示，通过挂钩上的腰形孔，用螺栓压紧挂钩。


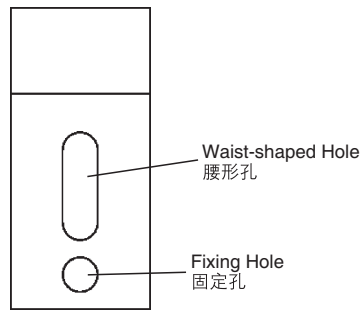


Fig.7
图7

2. As shown in the picture below, if the position of the urinal needs to be adjusted, please take down the urinal and knock the hanger slightly to adjust its position upwards and downwards.

2. 如下图所示，如果小便斗上下位置不合适，请取下小便斗，用锤子轻轻的上下敲击挂钩，调整挂钩的上下位置。

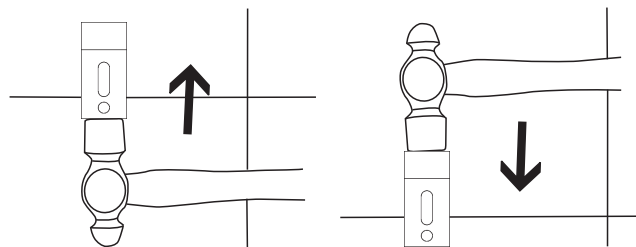

Adjust Upwards and Downwards
上下调整挂钩位置

Fig.8
图8

3. After the position of the urinal is decided, completely fix the hanger with the bolt through the fixing holes on the hanger.

3. 确定挂钩位置后，通过挂钩上的固定孔，锁入螺栓使得挂钩完全的固定。

D. Install the drain and the plastic trap

D. 装去水器 and 塑料弯管

1. Put the washer onto the drain and insert it into the hole.
2. Put the gasket and nut on the bottom.

NOTE: Do not over screw the nut in this step, because it is to be screwed tight in the next step after the pipe is installed.

1. 将去水器套上垫圈并插入陶瓷孔。
2. 底部套上橡胶垫圈和锁紧螺母。
注意：锁紧螺母不要旋紧，因为要在下一步骤安装弯管后才能旋紧。

3. Connect the hose with the trap.
4. Screw the trap onto the drain and screw tight.
5. Screw tight the nut of the drain mentioned in step.

3. 连接软管和塑料弯管。
4. 将塑料弯管和去水器旋上拧紧。
5. 旋紧第2步骤的去水器锁紧螺母。

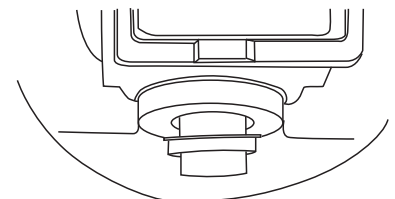
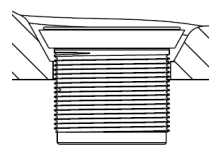


Fig.9
图9

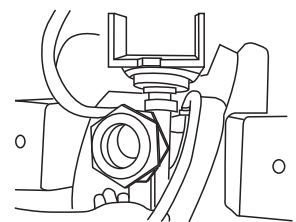
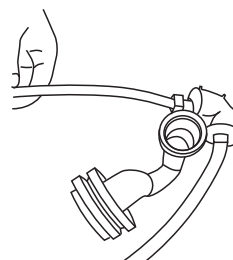


Fig.10
图10

6. As shown in the picture, screw the crossbar into the screw head of filter cap (2-3 turns, as long as it doesn't fall), place the crossbar into the opening of the connector and swivel the filter cap to make the crossbar stuck inside the connector, continue to screw tight.

6. 按图示将横杆旋进过滤盖螺头（旋进2-3圈不掉落即可），横杆放入接头开口并旋转过滤盖使横杆卡在接头内部，继续旋转拧紧。

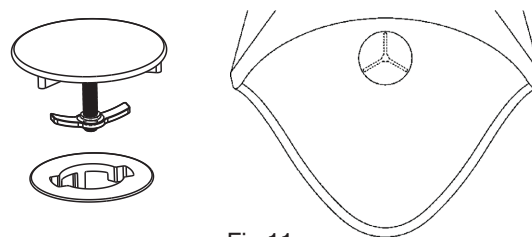


Fig.11
图11

E. Install the manual button and magnetic valve

E. 装手动按钮和电磁阀

1. Install the magnetic valve.

1. 装电磁阀。

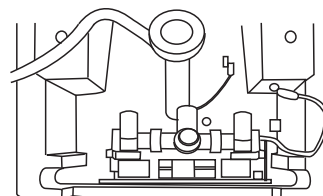


Fig.12
图12

2. Install the manual button. Insert the button into the hole, then put on the washer and the nut.

2. 装手动按钮。将手动按钮插入陶瓷孔并套上垫圈锁紧螺母。

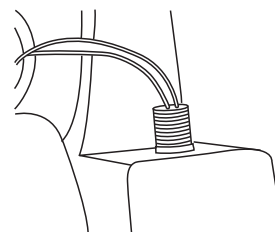


Fig.13
图13

3. Connect with the hose.

3. 连接软管。

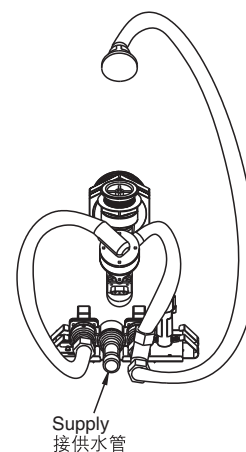


Fig.14
图14

F. Install the sensor controller

F. 装感应控制器

1. Install the sensor controller box.

2. Connect the sensor wire.

1. 装感应控制盒。

2. 连接感应线路。

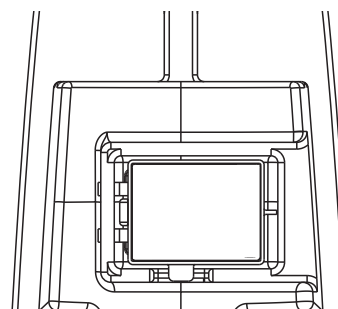


Fig.15
图15

G. Install and uninstall the Fixture, Valve Battery Box Assembly

Unscrew the screws on the Fixture, Valve, Battery Box Assembly and withdraw the clamp. Remove the Fixture, Valve Battery Box Assembly from the urinal by moving it rightwards and then downwards. Fix the Fixture, Valve Battery Box Assembly back to the urinal by doing the above steps inversely.

G. 支架阀体电池盒组件拆装

将支架阀体电池盒组件上的紧固螺钉拧松，然后抽出活动爪，将支架阀体电池盒组件整体向右抽出，再向下移动，便可将支架阀体电池盒组件从小便器上取下。将以上取出支架阀体电池盒组件整体的步骤反向操作，便可将支架阀体电池盒组件整体固定到小便器上。

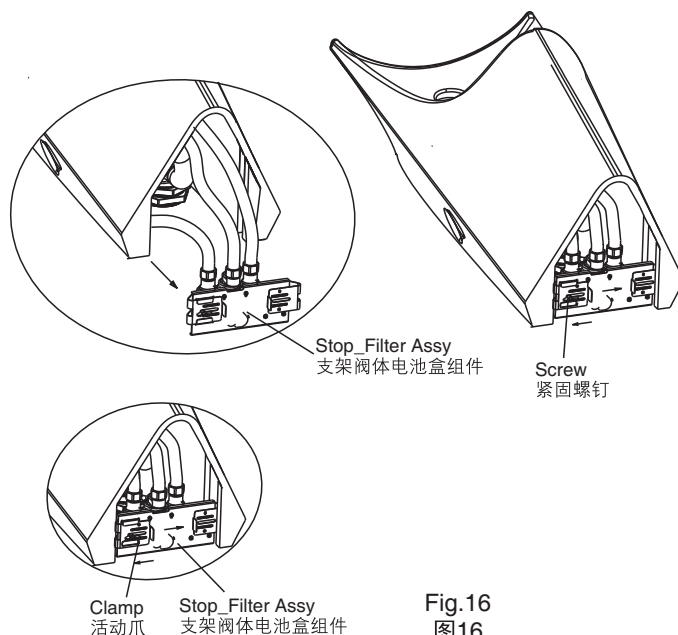


Fig.16
图16

H. Power Connection

H. 连接电源

Use DC or AC power unit as desired (not supplied). Refer to the installation instructions below.

Use the Kohler specified AC or DC power supply. Any product damage or loss caused by the use of non-specified power supply shall be borne by the user.

1. Install DC Power Unit (DC battery box K-29184T-NA needs to be purchased separately) please refer to Fig.21.
2. Install AC Power Unit (AC power unit K-16306T-NA needs to be purchased separately), The way of installation is as shown:

客户根据需求可选配直流或交流电源(需另购)，以下有分别对直流和交流电源的安装说明。

请使用科勒指定的原装交流或直流电源，如因使用非指定电源所引起的产品故障及损失，由用户自行承担。

1. 安装直流电源(需另购直流电池盒K-29184T-NA)请参阅图21。
2. 安装交流电源(需另购交流电源盒K-16306T-NA)，安装方式如下：



CAUTION:

- a. Do not connect 220V AC Power supply to DC wiring terminal.
- b. Do not damage the covering of AC power unit or remove screws to avoid leakage.



警告：

- a. 禁止将220V交流电源接入直流接线端。
- b. 安装时严禁损伤交流电源盒外壳或移开交流电源盒盖螺丝。

A. Fig.18: AC power unit connect way:

AC power unit is connected to electric control box by connection wire.

A. 图18：交流电源盒连接方式：

交流电源盒通过连接线与电控盒相连。

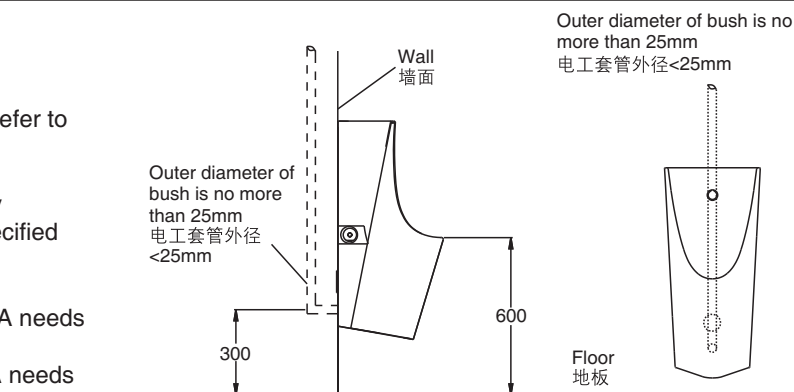


Fig.17
图17

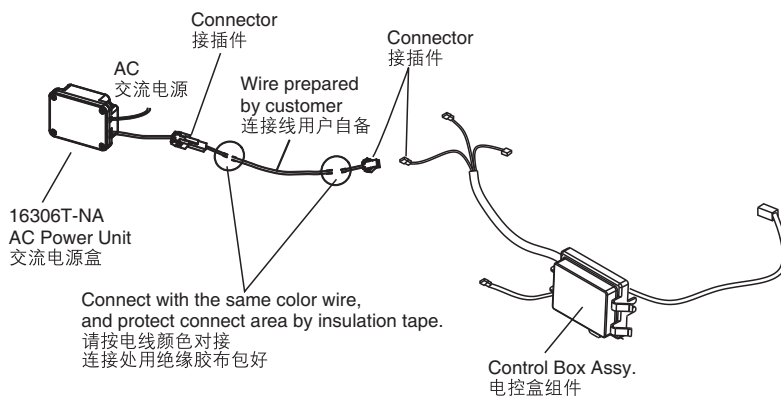


Fig.18
图18

B. When installing the power unit on the ceiling, please layout bushing according to Fig.19 and thread wire through the bushing.

Fig.19: Connection sketch while installing power unit on the ceiling.



CAUTION: One AC power unit can supply two sensors at most.

B. 将电源盒放在天花板上，如图示安装电工套管，管内装入电线。

图19：交流电源盒安装在天花板上的连接示意图。



警告：一个交流电源盒最多可连接两个感应区。

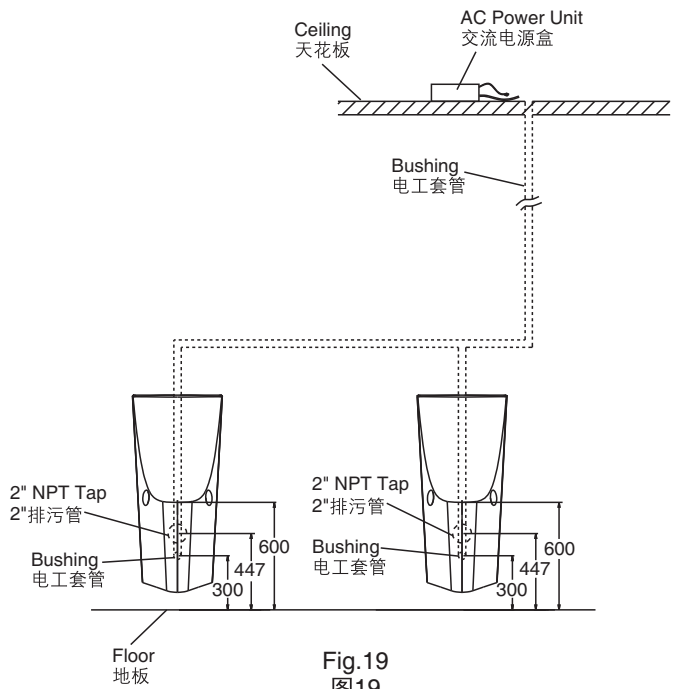


Fig.19
图19



Notice:

- Keep the connector away from water.
- Don't mistake the direction of inlet and outlet.
- Do not connect the DC output of AC power unit to AC power supply.
- Do not connect to power supply while installing.
Connection line is not supplied. AC connection wire with insulating sleeving is recommended. Wire of which the nominal sectionn area of conductor is not less than 0.5mm^2 is also recommend. DC connection line use wire of which the nominal section area is not less than 0.3mm^2 . It is cut according to acted installation requirements (The length of cut wire is recommended less than 10m).
- The head AC power supply must be protected with appropriate fuse.
- Please confirm the AC power supply and water supply should be shut off before maintaining the products with AC power related.



注意：

- 不要让电线接插件接触水。
- 不要将进出水方向弄错。
- 不可将交流电源盒的直流输出端与交流电连接。
- 安装时不要向电源盒供电。连接线请用户自备，建议交流电源线采用导体标称截面积 $\geq 0.5\text{mm}^2$ 的电线，直流连接线采用导体标称截面积 $\geq 0.3\text{mm}^2$ 的电线，电线长度根据实际安装需要自行裁剪（建议连接线长度小于10m）。
- 交流电的总电源必须有合适的熔断丝加以保护。
- 维修时必须断开交流电源并关闭水源。

Illustrations

使用示意图

The urinal will automatically flush after using.

使用后，小便器自动冲水。

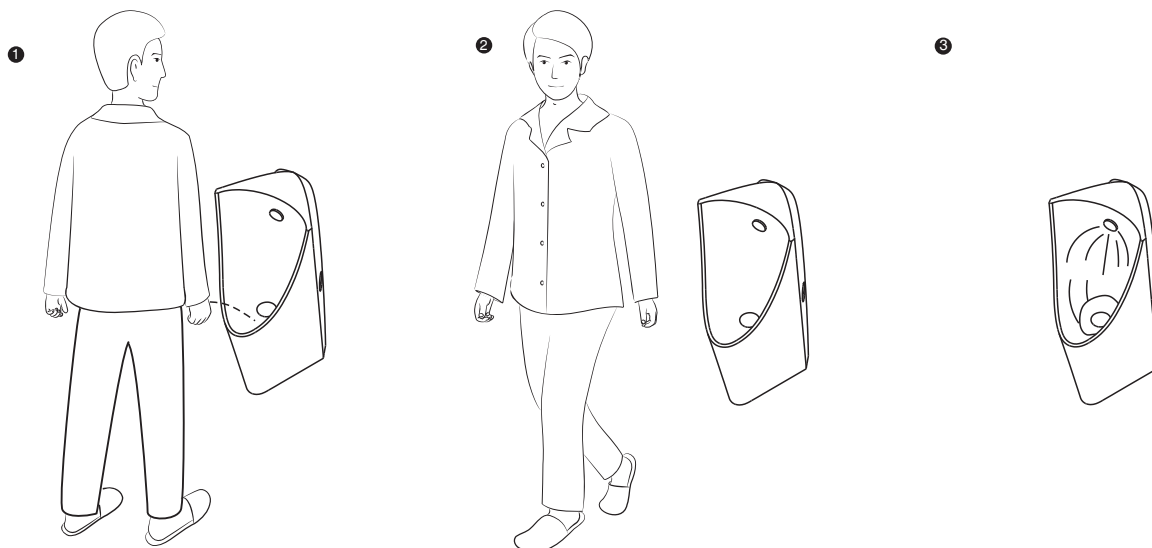


Fig.20
图20

Replacement of Batteries

When the batteries run out, please remove the Battery Box Assembly by following the instructions in step C and then replace the batteries.

电池的更换

当电池耗尽时，参照步骤C取下电池盒组件，并更换电池。

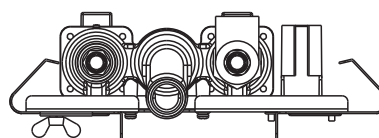
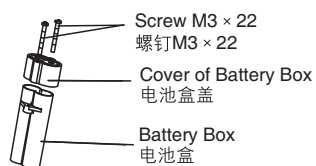


Fig.21
图21

Deodorizing Flushing

防臭冲洗

The urinal will take a flush automatically when it's used 3 or 4 times in 2 minutes.

当2分钟内连续3-4人以上使用时，小便器自动冲洗一次。

Manual Flushing

Press the manual button for about 1 second and the urinal will automatically flush once.

Sensorless Cleaning Mode

Enter the sensorless cleaning mode by pressing the manual button for about 3 seconds after the flushing is finished. The controller will ring twice every 2 seconds.

Under this mode, press the manual button for about 1 second to start or stop flushing. The longest continuous flushing time is about 15 seconds.

The urinal will automatically exit this mode after it started for about 8 seconds. You can also exit this mode by pressing the manual button for about 5 seconds. The controller stops ringing after the urinal exiting this mode.



Notice: This function can be used after the power is turned on for ten minutes.

手控冲洗

按住手动按钮2秒左右，即能实现冲水一次。

无感应清洁模式

长按手动按钮至冲水结束后3秒左右可进入无感应清洁模式，此时控制器每2秒快响2声。

无感应清洁模式下短按手动按钮1秒左右，可控制小便器出水或停水，最长持续出水时间约15秒。

无感应清洁模式持续约8分钟后能自动退出，或者长按手动按钮5秒左右退出。退出后控制器无声音。



注意：接通电源十分钟后可使用以上功能。

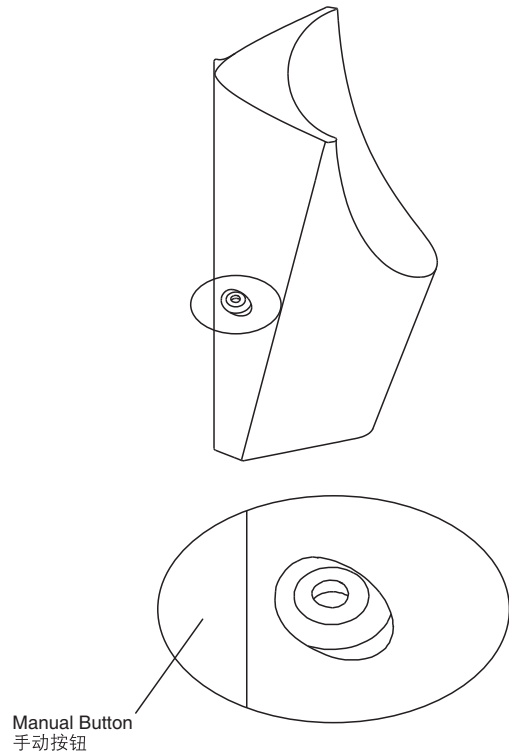


Fig.22
图22

MAINTENANCE

维护保养

Clean the Filter Screen

If the flushing volume declines sharply after installation or used for a long time with no cause from water pressure, the filter may need a wash. Please operate as following steps: Remove the Fixture, Valve, Battery Box Assembly and take out the filter, clean the filter and then reinstall it.



- Caution:**
- Turn off the water supply and power supply before cleaning the filter.
 - Avoid damaging or losing the filter during cleaning.

清洗过滤装置

初装或使用较长时间后，如发现出水量明显变小，而非水压原因，可进行以下操作：
将支架阀体电池盒组件拆下，取出滤网，刷洗干净后重新装入即可。



- 警告：**
- 清洗前，请先关闭水源，切断电源。
 - 清洗滤网过程中防止滤网变形损坏或丢失。

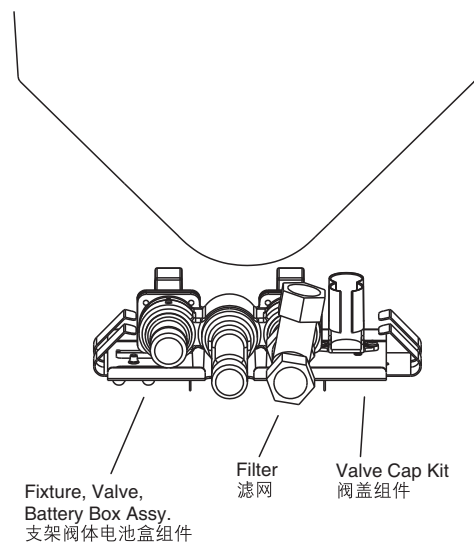


Fig.23
图23

TROUBLESHOOTING

Please make following checks before repair:

Symptoms	Probable causes	Corrective actions
No flushing	1. No power or mistake connected. 2. Not able to detect the urine. 3. Out of electricity.	1. Check the power connect. 2. See user's guide. 3. Replace batteries.
No flushing or poor flushing	1. Adjusting bolt not fully open 2. Low water pressure. 3. Filter is obstructed.	1. Open the adjusting bolt. 2. Improve water supply. 3. Clean the filter.
No flashing	1. The small hole of valve core is blocked. 2. The filter of valve core is blocked.	1. Clean the small hole of valve core with thin steel wire. 2. Wash the filter of valve core with a brush.

If the trouble remains after above-mentioned actions are taken, please contact with us via distributor.

简单故障排除

请在委托修理前做以下检查:

现象	可能原因	处理方法
不出水	1. 无电源或接线有误 2. 未检测到尿液 3. 电池耗尽	1. 检查电源连接 2. 见使用说明 3. 更换新电池
出水较差	1. 调节栓未完全打开 2. 水压太低 3. 过滤装置脏堵	1. 打开调节栓 2. 改善供水情况 3. 清洗过滤装置
不停水	1. 阀芯小孔堵塞 2. 阀芯滤网脏堵	1. 用细钢丝清理阀芯小孔 2. 清洗阀芯滤网

如按以上操作仍未解除故障，请通过销售商与本公司联系。

IMPORTANT CONSUMER INFORMATION

Consumer Responsibilities

- Do not directly flush the sensor with water. The sensor is an electronic instrument.
- Keep away from strong electromagnetic field.
- Clean the urinal with soft rag and neutral liquid detergent. Do not use eradicant, abrasive powder or oil, acid or alkali liquid detergent.
- Urinal is designed for use with potable water. Avoid water that includes a lot of contaminants or acid/alkali water and impure water.
- All electrical connection must be compliance with related regulation and codes.
- All installation staff should be well familiar with installation instruction.



WARNING: Never spit phlegm and throw stub or something else into the urinal.
Please avoid using articles either dissolvable or with the diameter smaller than 5mm, such as moth ball.



WARNING: Risk of product damage.
Do not throw into the urinal what is easy to block it, such as newspaper, paper pilch.
Do not bump the vitreous china with great force to prevent it from damaging and leaking.
Do not use the product in the water below 0°C.



CAUTION: Please do not use hard materials (like scouring pad) to clean product surface, especially the product logo.

用户须知

用户责任

- 感应器为电子器具，请勿直接用水冲洗。
- 请勿靠近强电磁场。
- 可用中性清洁剂和软布擦洗小便器。禁止使用去污粉、研磨粉及油类、酸性类、碱性类清洁剂。
- 使用水源为自来水或可供饮用井水。避免使用含有杂质较多或带有酸、碱性的处理水或未加工处理的水。
- 所有电路连接必须符合相关规范和条例要求。
- 所有参与安装人员都必须熟知安装说明。



警告：请勿往小便器内吐痰、扔烟蒂等杂物。

请勿在小便器内放置直径小于5mm或可溶解的物品，如樟脑球等。



警告：提防损坏产品。
请不要向小便器内冲入新闻纸、纸尿裤等容易堵塞的物品。
请不要用重力撞击陶瓷，以防止破损漏水。

不要在0°C以下的水环境中使用。



警告：请勿使用钢丝球等硬质材料擦洗产品表面，特别是产品商标处。

Description of Content of Hazardous Substances in Product

Reclaim Indication:

When the product exceeds service life or is unable to use after repair, do not throw the product away in the normal trash. Please dispose the waste electronic parts through a qualified reclamation enterprise. Make sure the product is handled properly. Disposing of product must be done in accordance with the local or national government law.

Statistics of Contents of Toxic or Hazardous Substances or Elements

Part name	Toxic or Hazardous Substance or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls(PBB)	Polybrominated Diphenyl Ethers (PBDE)
Valve Assy.	×	○	○	○	○	○
Sensor Assy.	×	○	○	○	○	○
* Battery Box Assy.	○	○	○	○	○	○
* Battery	○	○	○	○	○	○
* AC Power Box	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

○: Indicates that the substance in the material composition is below the high limits of the current requirements in GB/T 26572.

×: Indicates that at least one of the homogeneous substance in the material composition is below the high limits of the current requirements in GB/T 26572.

*: Indicate only partial product series contains this substance.

Note: the information provided is based on the supplier data and Kohler inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler will strive to reduce the use of these hazardous materials used in this product.



The product "service life for environment protection" is 10 years; Kohler Company will specify product service life based on product characteristics. The product "service life for environment protection" is only effective when the product is used as described in the product specification.

产品中有害物质含量的说明

回收提示

本产品超过使用期限或经过维修无法正常使用后，不应随意丢弃，请交由有废弃电器电子产品处理资质的企业处理，正确的处理方法请查阅国家或当地有关废旧电器电子产品处理的规定。

有害物质统计表

部件名称	有毒有害物质或者元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
阀体组件	×	○	○	○	○	○
感应器组件	×	○	○	○	○	○
*电池盒组件	○	○	○	○	○	○
*电池	○	○	○	○	○	○
*交流电源盒	○	○	○	○	○	○
附件类	○	○	○	○	○	○

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572现行有效版本规定的限量要求以下。

×: 表示有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572现行有效版本规定的限量要求。

*: 表示部分机型含有该部件。

注: 本表格提供的信息是基于供应商提供的数据及科勒公司的检测结果。本产品应用环保设计理念，在当前技术水平下，所有有害物质或元素的使用已经控制到了最低程度，科勒公司会继续努力通过改善现有技术来减少这些物质的使用。



本产品的“环保使用期限”为10年，科勒公司根据产品设计特性指定该期限。只有在本产品使用说明书所述的正常情况下使用本产品时，“环保使用期限”才有效。