

27355T	Tray (300MM)	置物底盘 (300MM)
27356T	Tray (260MM)	置物底盘 (260MM)
27357T	Tray (150MM)	置物底盘 (150MM)
27358T	Tray (110MM)	置物底盘 (110MM)
27359T	Toothbrush Holder(Square)	牙刷架 (方形)
27360T	Soap Dispenser	皂液器
27364T	Container (75MM)	储物盒 (75MM)
27365T	Container (150MM)	储物盒 (150MM)
27366T	Holder (300MM)	置物托盘 (300MM)
27367T	Tissue Box	纸巾盒
27368T	Toilet Brush Holder	马桶刷架
27369T	Mirror	化妆镜 (带底盘)
30079T	Tumbler (Round)	漱口杯 (圆形)
30490T	Holder (150MM)	置物托盘 (150MM)

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.

NOTE:

1. These products should be located and mounted to a wall. While it is possible to mount them to any surface, a stud or concrete mounted product will yield the best results.
2. The highest environment temperature for Tray, Holder, Container and Soap Dispenser is 60℃, products must be away from heater and cannot soaked in water for a long period, or it may become damaged.

DANGER: (Risk of personal injury)

These products are not designed or intended for use as a grab bar or support bar. Do not install where the product might be used as a grab or support bar.

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留在任何不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包含重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项:


1. 本产品为水泥墙面安装或木墙面安装。若安装在其他表面可能影响产品性能。
2. 产品最高使用环境温度为60℃，置物底盘/托盘、储物盒等产品须远离浴霸且不能长时间泡水，否则可能对这些产品造成损坏。

危险警告: (人身伤害)

本产品不能作为扶手等支撑物使用，请勿将产品安装在可能被误认为扶手等支撑物的位置。


ROUGH-IN DIMENSIONS

安裝尺寸

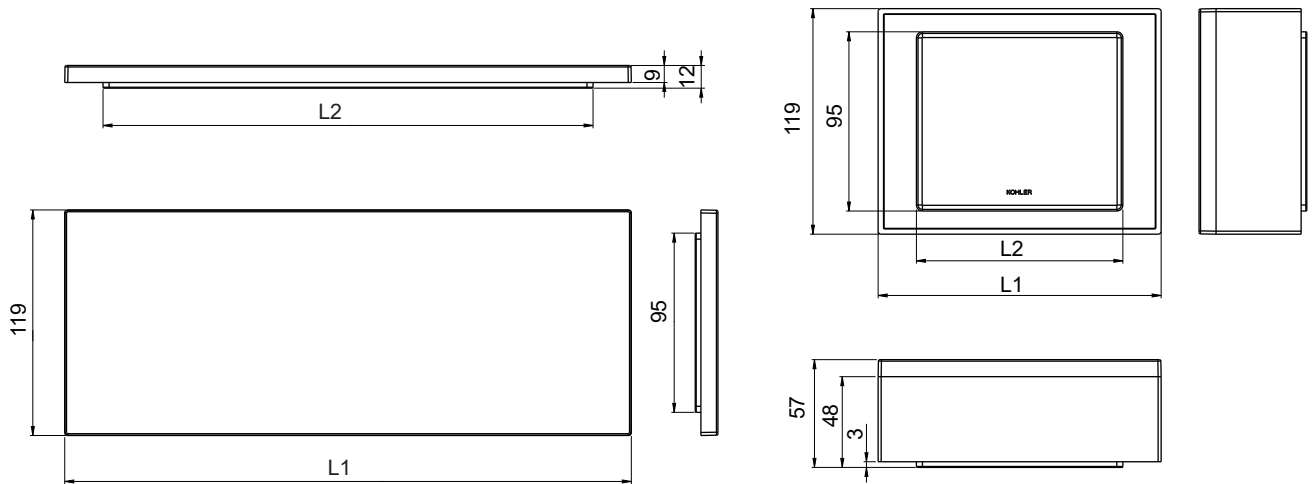


27355T (L1=300, L2=259)
 27356T (L1=260, L2=219)
 27357T (L1=150, L2=109)
 27358T (L1=110, L2=69)

27364T (L1=75, L2=34)
 27365T (L1=150, L2=109)

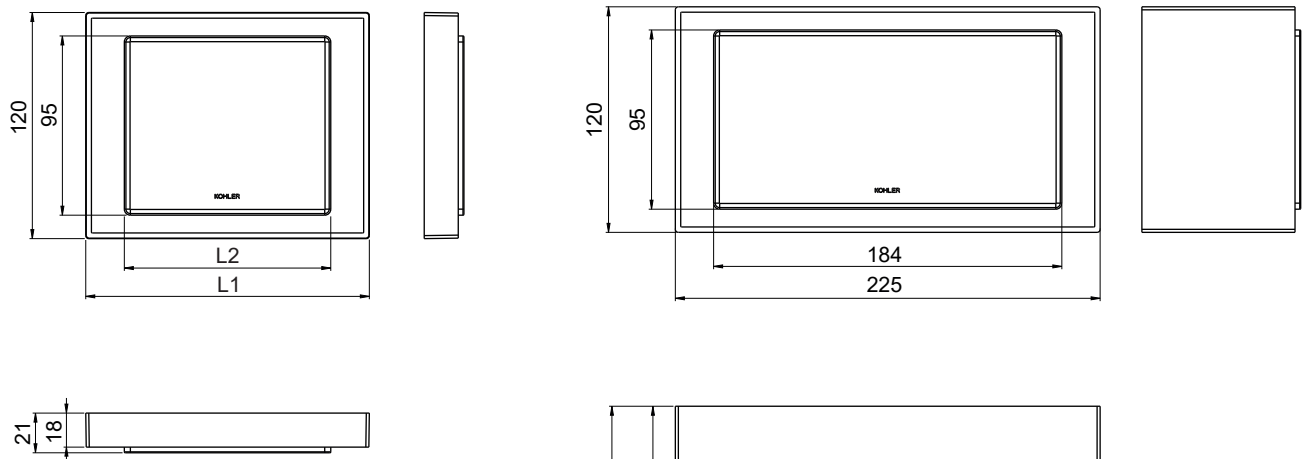


27366T (L1=300, L2=259)
 30490T (L1=150, L2=109)


27367T

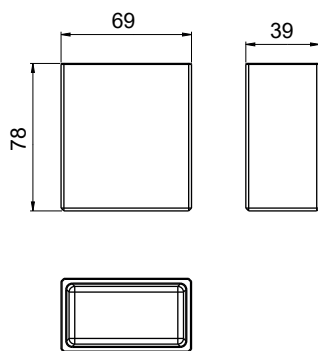


27359T

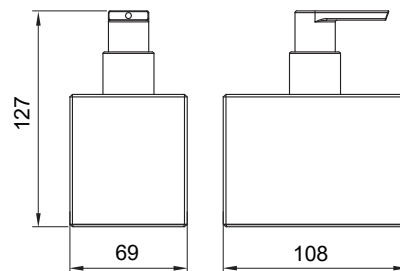


27360T

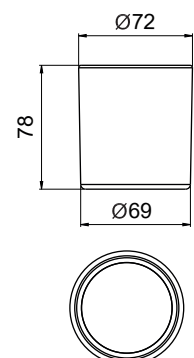

30079T

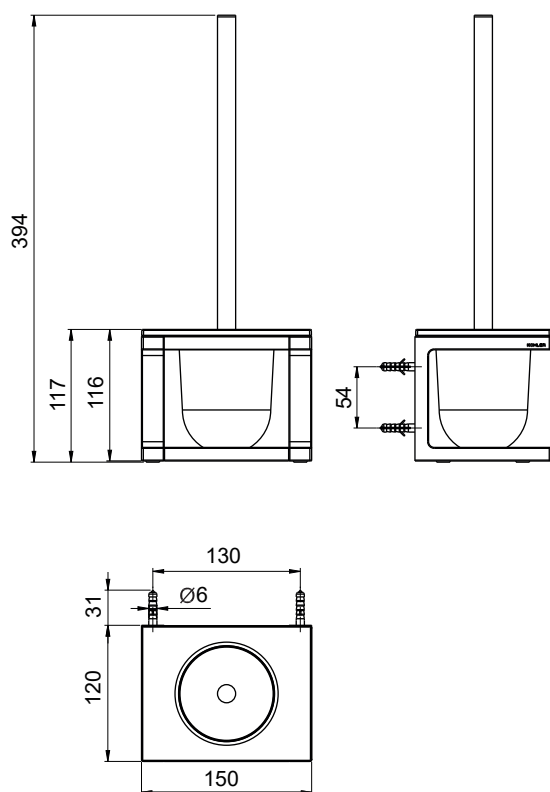

27368T

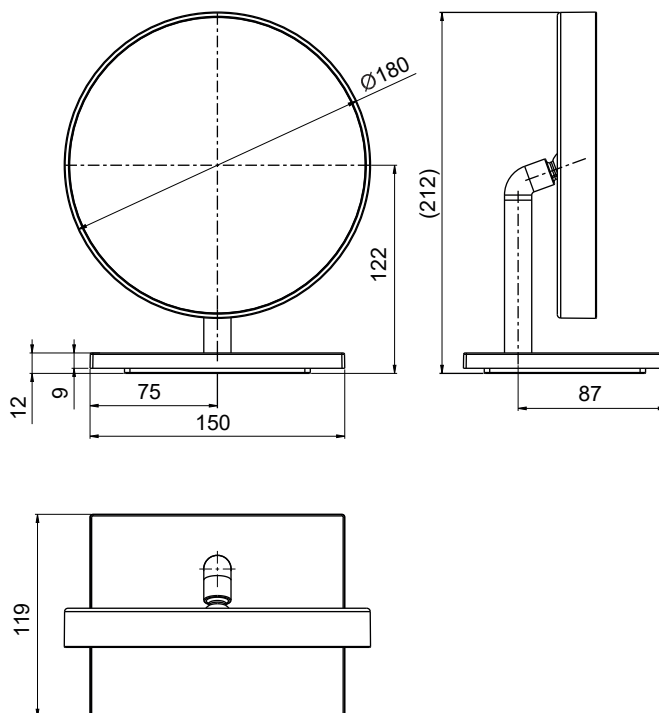

27369T

INSTALLATION

安装步骤

How To Install The Toilet Brush Holder

1. As shown in Fig 1, select a location on the vertical wall to stick the template, ensure the template is horizontal. Drill hole in the finished wall as required.
2. As shown in Fig 2, press the anchor (1) into the hole. Orienting the bracket (3) and ensure two screw holes of bracket are vertical. Secure the bracket with the self-tapping screw (2).
3. As shown in Fig 3, Slide the extension of frame kit (6) onto the bracket, tighten the screw (4) with the hex wrench (5) to secure frame kit.
4. As shown in Fig 4, Slide the brush holder kit (7) onto the frame.

Note: According to user's preference, this product can be placed directly on the floor or mounted on the wall.

如何安装马桶刷架

1. 如图1所示，在垂直面的墙壁上找一合适的位置粘贴模板，确保模板水平。根据胀塞直径钻孔。
2. 如图2所示，将胀塞(1)塞入孔中，调整底座，保持底座(3)上的两螺钉孔铅锤，用自攻钉(2)固定底座。
3. 如图3所示，将置物架组件(6)装到底座上，用六角扳手(5)锁紧螺钉(4)，固定置物架组件。
4. 如图4所示，将马桶刷组件(7)放置到置物架组件上。

注意：此产品可根据用户需要，选择直接放置在底面上或安装在墙面上使用。



Fig 1

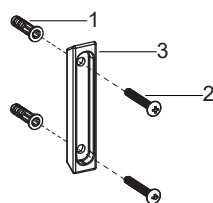


Fig 2

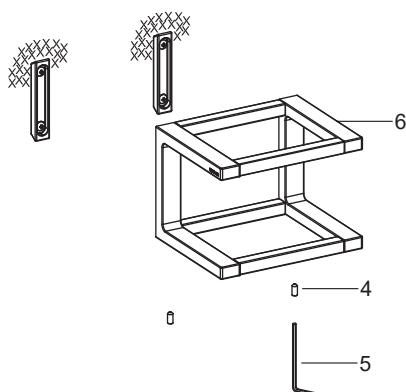


Fig 3

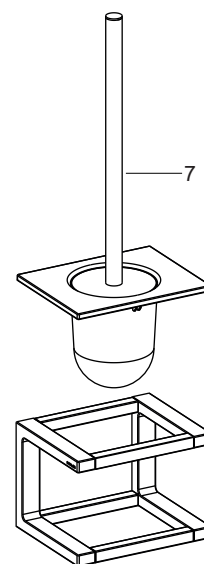



Fig 4

How To Use The Soap Dispenser

Remove the cap (8) after turning counterclockwise, fill the bottle (9) with lotion or hand sanitizer, then tighten the cap. Press the pump head (10) in use.

如何使用皂液瓶

将皂液瓶盖(8)按逆时针方向旋松并取下，把乳液或洗手液倒入瓶(9)中，装回皂液瓶盖。使用时按压泵头(10)根部即可。

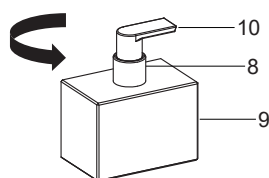


How To Use The Mirror

Rotate the frame up and down to adjust the angle of the mirror.

如何使用化妆镜

化妆镜时可通过上下转动镜框来调节使用角度。

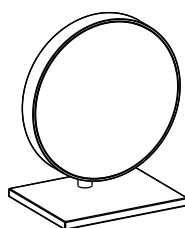


How To Use The Tissue Box

Take the cover (11) out, put the unpacked tissue paper into the box (12), then put the cover on the paper.


如何使用纸巾盒

取出纸巾盖(11)，将开封后的抽纸放入到纸巾盒(12)内，然后再将纸巾盖放入纸巾盒内。

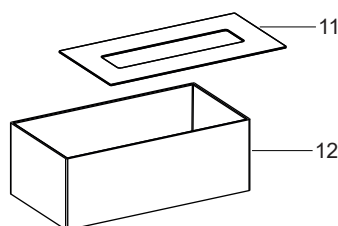

27360T Soap Dispenser 皂液器

27368T Toilet Brush Holder 马桶刷架

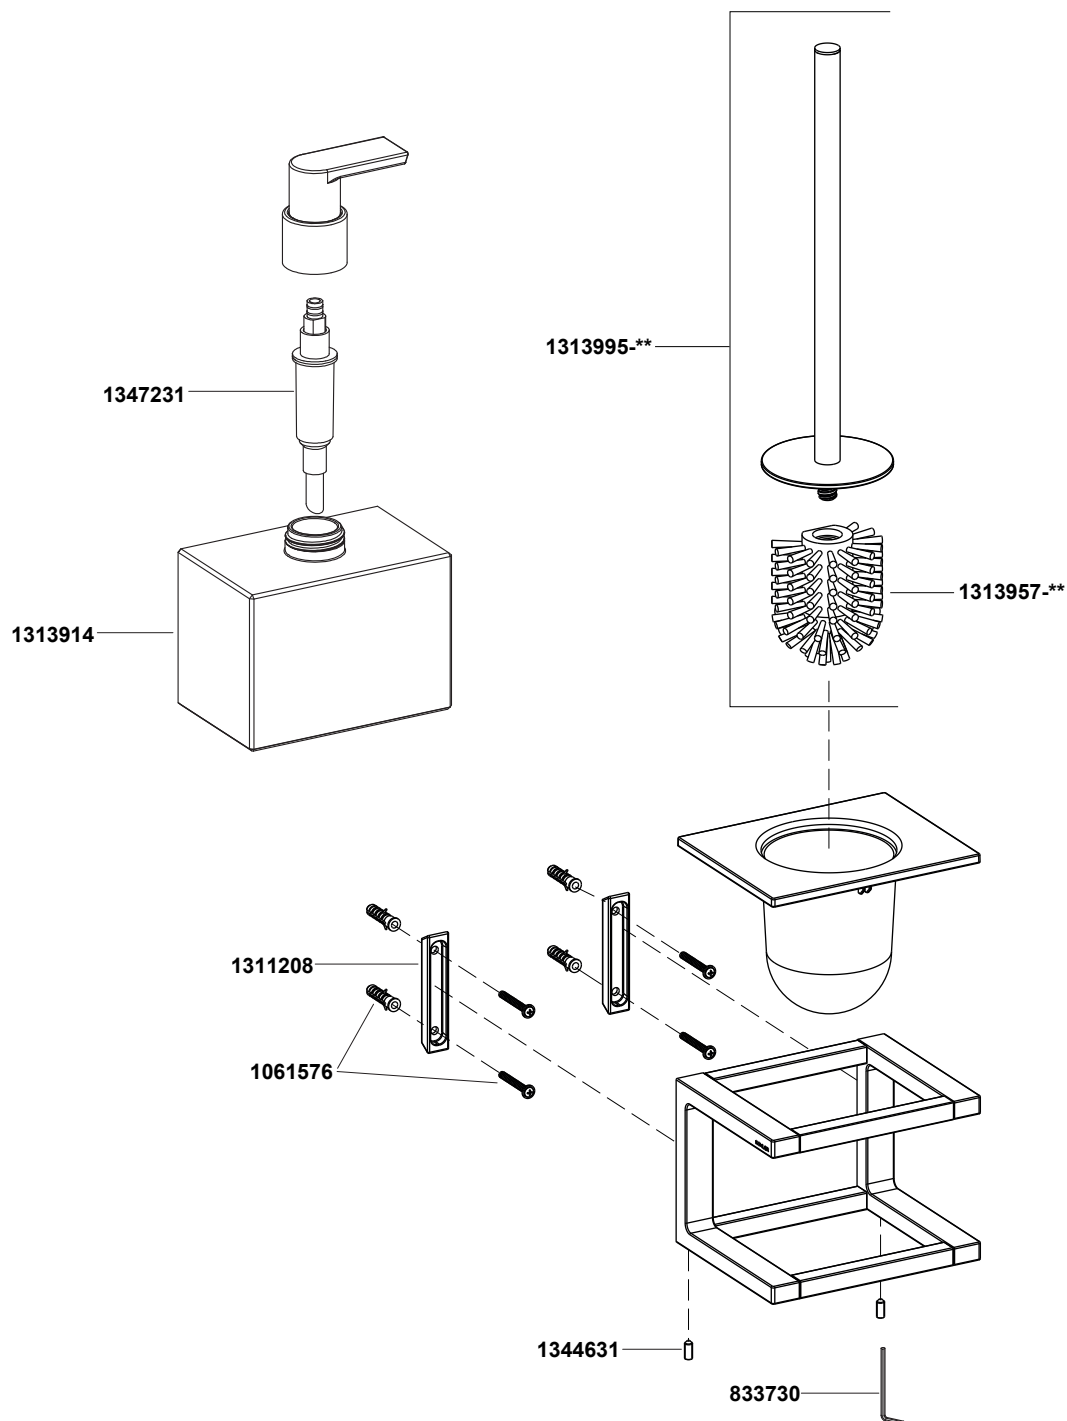

**Color code must be specified when ordering

**订购时请说明颜色编号

NOTE: For all Asia pacific regions (excluding China) add SP (SPxxxxxx**) in front of the part number when ordering.


注意: 除中国外, 其他亚太区订购服务零件时请在前面加SP(即SPxxxxxx**)

Product Combination

产品搭配/组合


Alternative parts

可替换件

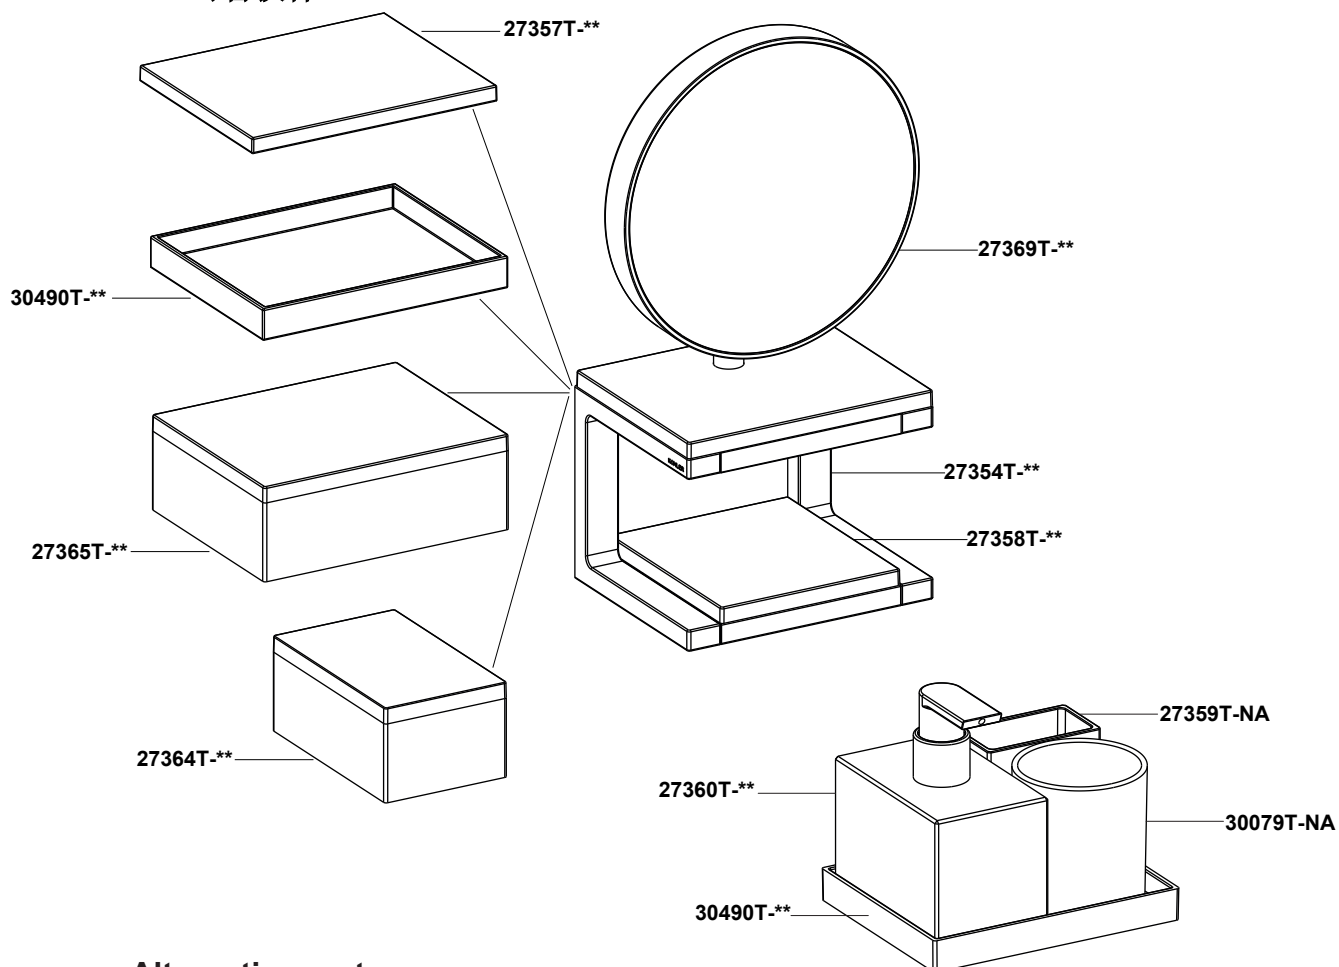

Alternative parts

可替换件

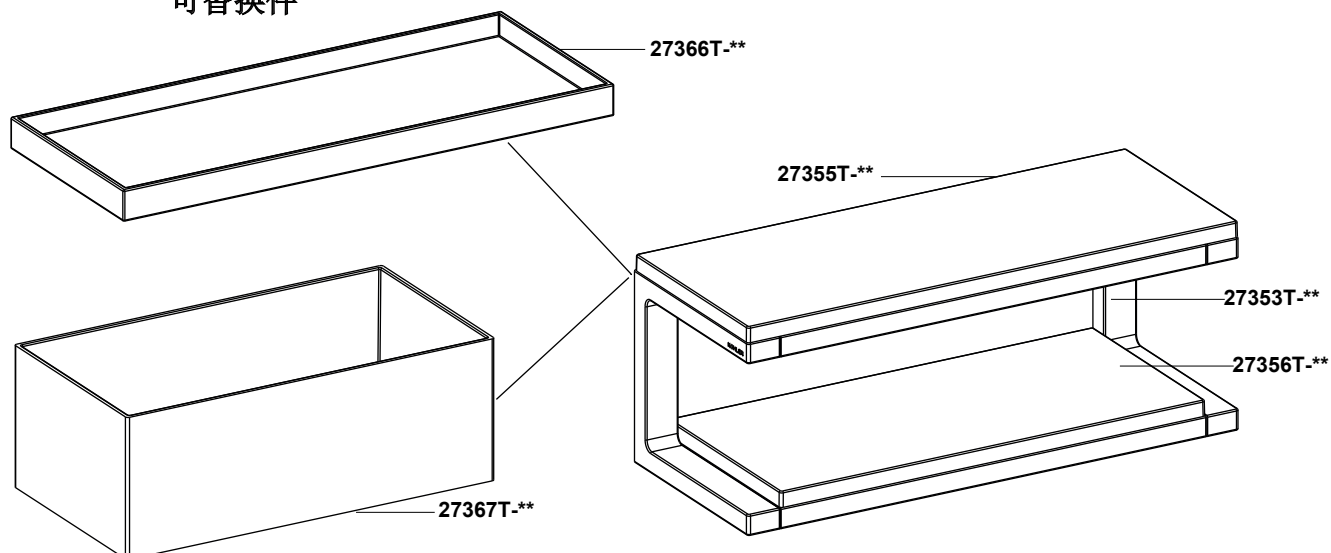

**Color code must be specified when ordering

**订购时请说明颜色编号

NOTE: For all Asia pacific regions (excluding China) add SP (SPxxxxxx**) in front of the part number when ordering.

注意: 除中国外, 其他亚太区订购服务零件时请在前面加SP(即SPxxxxxx**)

INSTALLATION CHECKOUT	安装结果检查
Ensure that all connections are tightened.	检查并确保所有的连接处都已拧紧。
CLEANING INSTRUCTIONS	清洗说明
All finishes: clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish are not recommended for cleaning.	适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。
Do not use abrasive cleaners or solvents on Kohler faucets and fitting.	有磨损性的清洁用具或清洁剂也不可使用于科勒的水龙头及其配件上。
Plastic products cannot use dishwasher to clean.	塑料制品不能用洗碗机进行清洗。